


FLOW CHART FOR DISPOSAL OF LABORATORY WASTES

BIOLOGICAL & CLINICAL WASTES

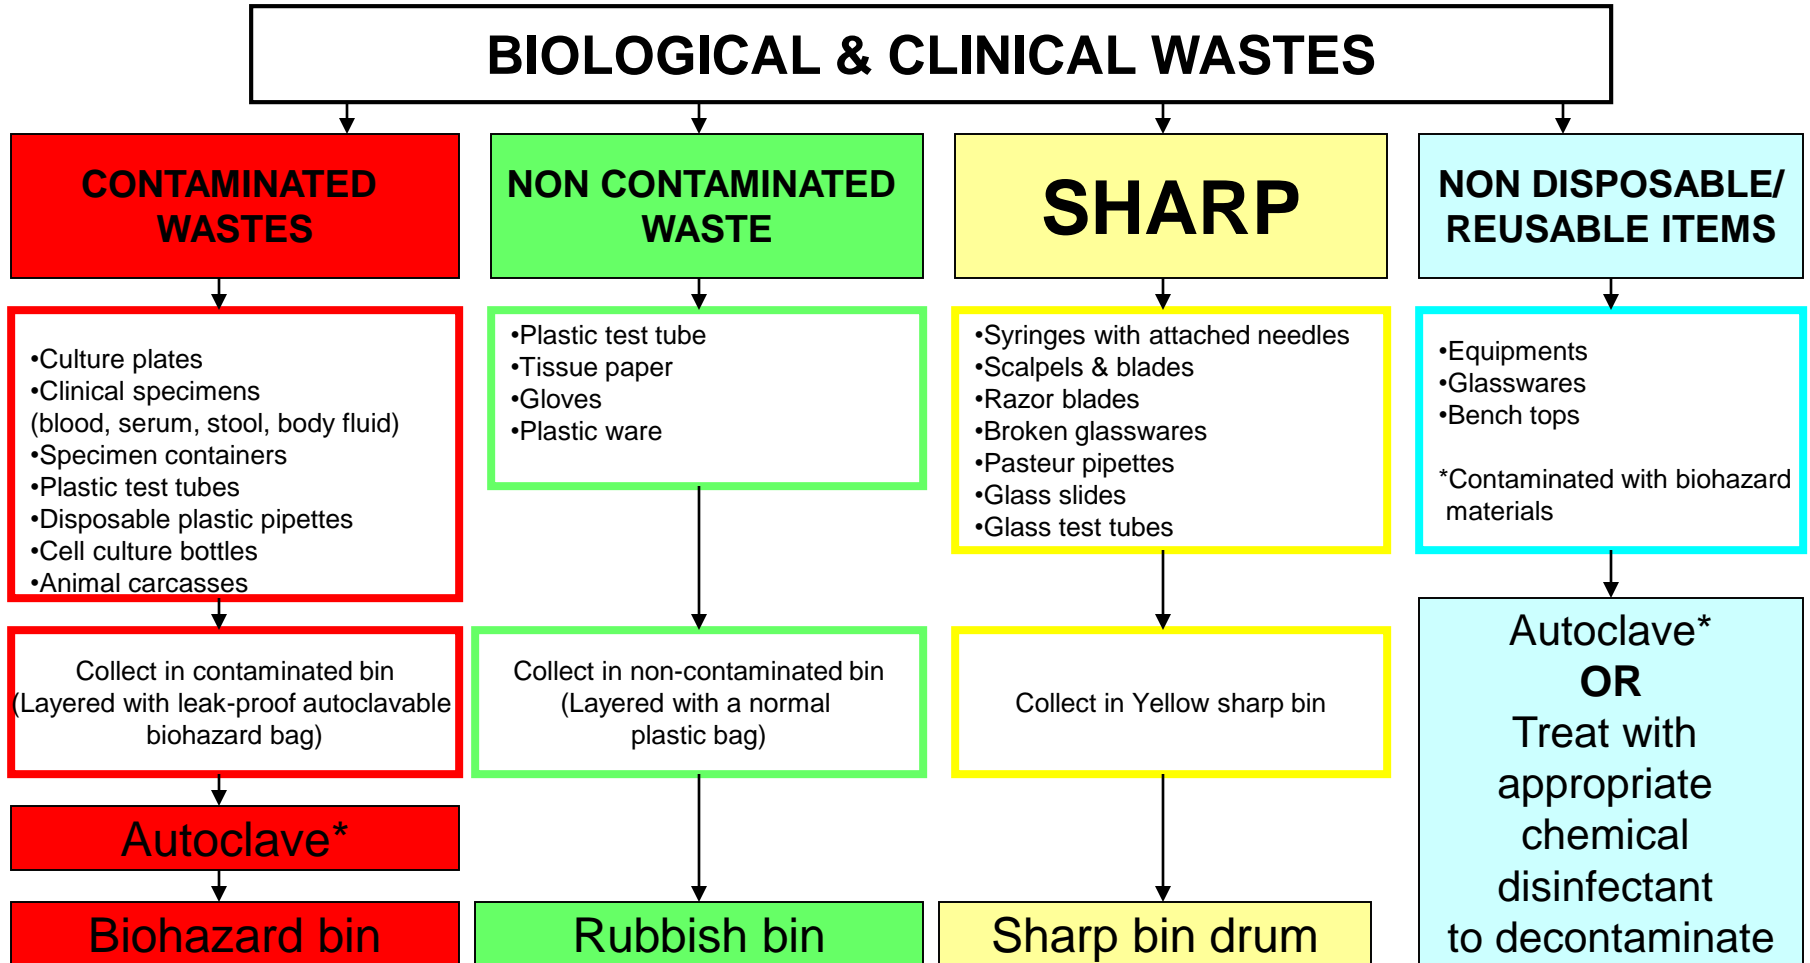

*Autoclave :121°C, 15 psi, 20 minute